

# P2-TR

## START TRUCK



### TROLLEY SYSTEM

Easily move the booster to where it is needed using the trolley wheels and handle.

### REVERSE POLARITY ALARM

This audible and visual alert informs professionals of incorrect terminal connections.

### 12-24V SWITCH

Easy to use switch allows the booster to be changed from 12V to 24V.

### DIGITAL VOLTMETER

This display allows professionals to quickly see the voltage available and to test the alternator of a vehicle.

## 12/24V

Model	Volts	Peak Amps (A)	Starting Amps (A)	# Of Batteries	Location of Fuse	Fuse (A)	Dimensions (cm)	Cable Diameter (mm <sup>2</sup> )	Cable Reach (cm)	Unit Weight (KG)	Charger Voltage (V)	Charger Amps (A)	Vehicle Types
P2-TR-33	12/24	6400/3200	2560/1280	2	Clamp	500	36x16x42	50	205	37	230	7	